


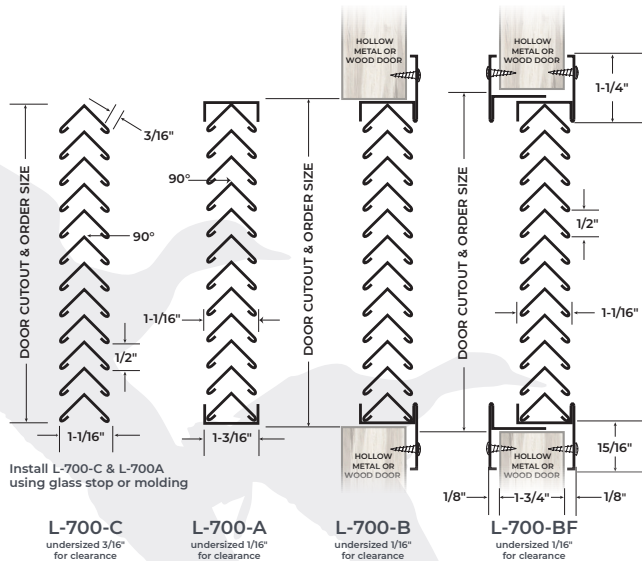

L-700

No Vision Door and Partition Louver

For 1 3/8", 1 3/4" up to 2 1/4" Thick Doors



FOR LOUVERS WITH FRAME

L-700-B, L-700-BF

1. Cut out door in accordance with door manufacturers procedure.
2. If door cut-outs have radius corners it may be necessary to square them out prior to installing the louver.
3. Position outer frame with louver core, in door cut out, insert and start all screws before fully tightening.
4. Tighten screws using a crisscross pattern. Use caution when using power screw driving equipment to avoid stripping the material.
5. Position inner frame (L-700-BF only) and secure to door using the same procedure.

(Continued on the back)



(Continued from the front)

INSTALL LOUVER CORES

L-700-A, L-700-A-316SS, L-700-C

1. Cut out door in accordance with door manufacturers procedure.
2. Install molding or glass stop type material (by others) on one side of where louver is to be mounted.
3. Position louver core and install molding or glass stop type material (by others) on other side to hold louver securely in place.

FIELD PAINTING: for best results scuff finish with a Scotch-Brite® pad prior to painting.

