



# 107

## Perimeter Seal



See [ngp.com](http://ngp.com) for All Applicable Certifications for this Product.



POSITIVE PRESSURE TESTED GASKETING MATERIALS FOR FIRE DOORS FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS RATED UP TO 1 1/2 HOURS. CATEGORY H

SILCONE AND NEOPRENE ARE SMOKE AND DRAFT CONTROL GASKETING (CATEGORY H) TESTED TO UL 1784; MEETS REQUIREMENTS OF NFPA 105, IBC FOR USE ON "S" LABEL DOORS.



[ngp.com](http://ngp.com)  
1-800-NGP-RUSH

FAX:  
(800) 255-7874

QUOTES:  
[quotes@ngp.com](mailto:quotes@ngp.com)

ORDERS:  
[orders@ngp.com](mailto:orders@ngp.com)




## INSTALLATION INSTRUCTIONS



### WARNING:

These products can expose you to chemicals including chloroprene or DINP Diisononyl phthalate, which are known to the State of California to cause cancer and/or developmental and reproductive harm. For more information, go to [P65Warnings.ca.gov](http://P65Warnings.ca.gov).

## 107

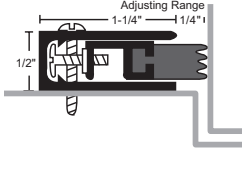

1. Set adjustment to mid range, so it can be adjusted equally in or out.
2. Cut to length.
3. With door closed, position seal, mark screw holes.
4. Drill pilot holes for screws using a #36 drill bit.
5. Install with screws provided, working from one end to the other. **DO NOT OVERTIGHTEN, OR ADJUSTMENT ABILITY MAY BE EFFECTED.**
6. Adjust seal so gasket is slightly compressed against door, but does not impede proper closing or latching.

[ngp.com](http://ngp.com)

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: [quotes@ngp.com](mailto:quotes@ngp.com)

ORDERS: [orders@ngp.com](mailto:orders@ngp.com)