


# NCP T13

## Neoprene Door Shoe

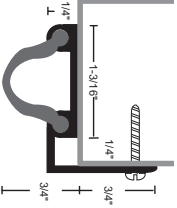

POSITIVE PRESSURE TESTED GASKETING MATERIALS FOR FIRE DOORS FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS RATED UP TO 1½ HOURS. CATEGORY H

SMOKE AND DRAFT CONTROL GASKETING (CATEGORY H) TESTED TO UL 1784; MEETS REQUIREMENTS OF NFPA 105, IBC FOR USE ON "S" LABEL DOORS.

- Aluminum Alloy 6063, T5 Temper
- Flame/Moisture Resistant
- #6 X ¾" Stainless Steel Sheet Metal Screws Furnished

# SEAL

**ngpp.com**  
**1-800-NCP-RUSH**


See ngpp.com for All Applicable Certifications for this Product.

---

# INSTALLATION INSTRUCTIONS

---

## 113

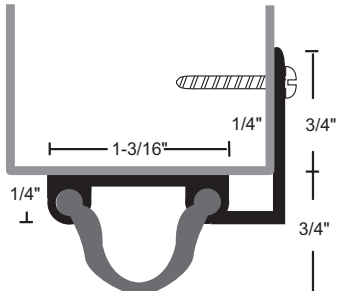

1. Measure and cut door shoe to fit.
2. Crimp or stake metal retainer at both sides and both ends to prevent gasket from migrating during use.
3. Position seal on door with gasket compressed  $\frac{1}{16}$ " against sill.
4. Mark screw holes.
5. Drill pilot holes with a  $\frac{7}{64}$ " bit.
6. Install with screws provided.
7. Adjust position so that gasket does not impede proper closing and latching of door.



[ngp.com](http://ngp.com)

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: [quotes@ngp.com](mailto:quotes@ngp.com)

ORDERS: [orders@ngp.com](mailto:orders@ngp.com)

### MEMPHIS

4985 East Raines Road  
Memphis, TN 38118

### CARSON CITY

3689 Arrowhead Drive  
Carson City, NV 89706