


136N, 136S, 136P Mortise Seal

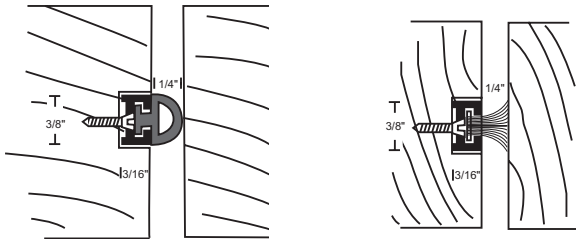

Installation Instructions

1. Cut seal to length.
2. Prepare the door by mortising 7/16" wide x depth desired to properly seal the gap.
3. Remove gasket material from metal retainer by sliding out the end.
4. Install metal retainer into mortised portion of door and fasten with screws provided.
5. Replace gasket material by sliding into metal retainer.
6. Adjust seal so it does not impede proper closing and latching of door.

Instrucciones de Instalación

1. Corte el sello a la medida.
2. Prepare la puerta haciendo una muesca de 7/16" de ancho con la profundidad deseada para sellar el espacio apropiadamente.
3. Remueva el empaque del retenedor metálico deslizándolo hacia fuera.
4. Instale el retenedor metálico en la muesca de la puerta y sujete con los tornillos suministrados.
5. Reinstale el empaque deslizándolo dentro del retenedor metálico.
6. Ajuste el sello para que no impida cerrar y correr debidamente el pasador de la puerta.