


## 143P, 143N, 143S Mortised Astragal Seals

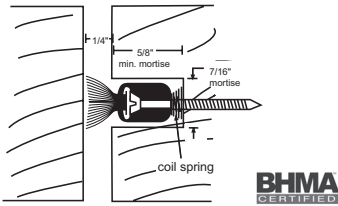

### Installation Instructions

1. Cut astragal to length.
2. Prepare the door by mortising 7/16" wide x 5/8" deep.
3. Insert screws into holes in astragal and then slide springs over tips of screws.
4. Install astragal into mortised portion of door.
5. Turn every screw approximately halfway in.
6. Then tighten each screw the necessary depth required to close the gap between the doors.
7. Slide gasket material into metal retainer.
8. Adjust so seal does not impede proper closing and latching of the doors.

### Instrucciones de Instalación

1. Corte el astrágalo a la medida.
2. Prepare la puerta haciendo una muesca de 7/16" de ancho por 5/8" de profundidad.
3. Inserte los tornillos en los orificios del astrágalo y luego deslice los resortes sobre las puntas de los tornillos.
4. Instale el astrágalo en la muesca hecha en la puerta.
5. Enrosque los tornillos aproximadamente hasta la mitad.
6. Ahora enrosque todos los tornillos lo suficiente para cerrar el espacio entre las puertas.
7. Deslice el empaque dentro del retenedor metálico.
8. Ajuste para que el sello no impida cerrar y correr debidamente el pasador de las puertas.