


16/17 Drip Strips

BHMA
CERTIFIED

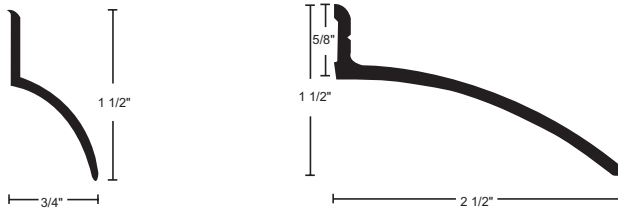

Typical installation is to exterior face of frame header. 17 can also be applied to exterior face of door at sill.

Length of drip strip should extend beyond width of door. Install full width of frame header if possible.

Installation Instructions

1. Mark hole locations.
2. Drill pilot holes for screws using a 7/64" bit.
3. Fasten screws, working from one end to the other.
4. Caulk top edge of drip strip and around each screw to prevent water penetration.

La instalación típica es en la cara exterior del cabezal. El 17 también se puede adaptar a la cara exterior de la puerta, en el umbral.

El largo de la tira de revestimiento debe exceder el ancho de la puerta. De ser posible, instálelo a todo el ancho del cabezal.

Instrucciones de Instalación

1. Marque la ubicación de los orificios.
2. Taladre los orificios guía para los tornillos con una broca de 7/64".
3. Apriete los tornillos procediendo de un extremo hacia el otro.
4. Calafatee el borde superior de la tira de revestimiento y alrededor de cada tornillo para prevenir que el agua penetre.