


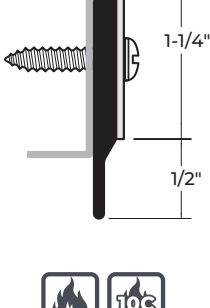

200SS

Stainless Steel
Door Sweep



BHMA
CERTIFIED

See ngp.com for
All Applicable
Certifications for
this Product.



POSITIVE PRESSURE
TESTED GASKETING
MATERIALS FOR
FIRE DOORS FOR
APPLICATION TO
HOLLOW-METAL-
TYPE FIRE DOORS
RATED UP TO 3
HOURS AND WOOD-
TYPE FIRE DOORS
RATED UP TO
1½ HOURS.
CATEGORY H

SMOKE AND
DRAFT CONTROL
GASKETING
(CATEGORY H)
TESTED TO UL
1784; MEETS
REQUIREMENTS
OF NFPA 105, IBC
FOR USE ON "S"
LABEL DOORS.

**S
M
A
F**

ngp.com
1-800-NGP-RUSH

FAX:
(800) 255-7874


QUOTES:
quotes@ngp.com

ORDERS:
orders@ngp.com



INSTALLATION INSTRUCTIONS

200SS

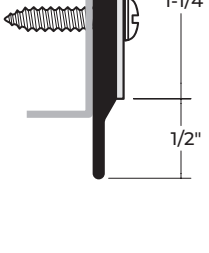

1. Cut sweep to fit.
2. Close door.
Hold sweep at bottom of door. Tap down until contact is made between the sweep and threshold.
3. Mark screw holes.
4. Drill pilot holes for screws using a $\frac{7}{64}$ " drill bit.
5. Install with screws provided.
6. Adjust position so sweep does not impede proper closing and latching of door.

ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

ORDERS: orders@ngp.com