




3

Steel Mounting Bracket

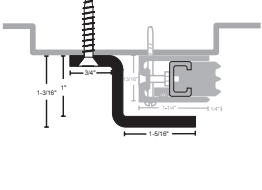

- ▶ Allows Installation of Door Closer Shoe/Rim Exit Device Strike w/o Interruption or Notching Perimeter Seals
- ▶ Furnished w/ #12 x 1 1/4" SMS Screw
- ▶ 3/16" Thick Steel
- ▶ 6" Long Steel



See ngp.com for All Applicable Certifications for this Product.



POSITIVE
PRESSURE TESTED
MISCELLANEOUS
FIRE DOOR
ACCESSORY



ngp.com
1-800-NGP-RUSH


FAX:
(800) 255-7874

QUOTES:
quotes@ngp.com



INSTALLATION INSTRUCTIONS

3

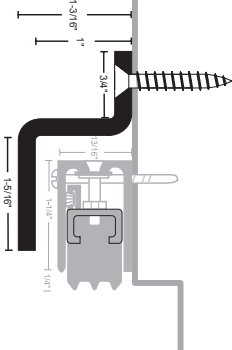

Note: Install seals and brackets before the closer. Seals and brackets installed at head will require the closer body to be installed lower on the door.

1. Install perimeter seals following instructions furnished.
2. Position mounting bracket over seal where door closer shoe or exit device strike requires mounting.
3. Mark screw holes.
4. Drill pilot holes for screws using $1\frac{1}{64}$ " drill bit.
5. Secure bracket with #12 \times $1\frac{1}{4}$ " SMS furnished.
6. Install closer shoe or exit device strike onto mounting bracket following manufacturer's instructions.

ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874
QUOTES: quotes@ngp.com