




313V

Aluminum
Door Shoe

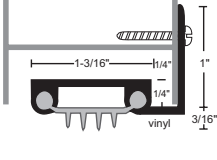

See ngp.com for
All Applicable
Certifications for
this Product.



POSITIVE PRESSURE
TESTED GASKETING
MATERIALS FOR
FIRE DOORS FOR
APPLICATION TO
HOLLOW-METAL-
TYPE FIRE DOORS
RATED UP TO 3
HOURS AND WOOD-
TYPE FIRE DOORS
RATED UP TO
1½ HOURS.
CATEGORY H

SMOKE AND
DRAFT CONTROL
GASKETING
(CATEGORY H)
TESTED TO UL
1784; MEETS
REQUIREMENTS
OF NFPA 105, IBC
FOR USE ON "S"
LABEL DOORS.



ngp.com

1-800-NGP-RUSH

FAX:

(800) 255-7874

QUOTES:

quotes@ngp.com


ORDERS:

orders@ngp.com



INSTALLATION INSTRUCTIONS

313V



1. Measure and cut metal retainer and gasketing insert to fit.
2. Crimp or stake metal retainer at both sides and both ends to prevent gasket from migrating during use.
3. Position seal on door with gasket compressed $\frac{1}{16}$ " against sill.
4. Mark screw holes.
5. Drill pilot holes with a $\frac{7}{64}$ " bit.
6. Install with screws provided.
7. Adjust height so that gasket does not impede proper closing and latching of door.

ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

ORDERS: orders@ngp.com