




# 318V

Aluminum  
Door Shoe

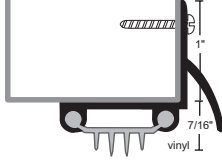

See [ngp.com](http://ngp.com) for  
All Applicable  
Certifications for  
this Product.



POSITIVE PRESSURE  
TESTED GASKETING  
MATERIALS FOR  
FIRE DOORS FOR  
APPLICATION TO  
HOLLOW-METAL-  
TYPE FIRE DOORS  
RATED UP TO 3  
HOURS AND WOOD-  
TYPE FIRE DOORS  
RATED UP TO  
1½ HOURS.  
CATEGORY H

SMOKE AND  
DRAFT CONTROL  
GASKETING  
(CATEGORY H)  
TESTED TO UL  
1784; MEETS  
REQUIREMENTS  
OF NFPA 105, IBC  
FOR USE ON "S"  
LABEL DOORS.



[ngp.com](http://ngp.com)  
1-800-NGP-RUSH

FAX:  
(800) 255-7874

QUOTES:  
[quotes@ngp.com](mailto:quotes@ngp.com)

ORDERS:  
[orders@ngp.com](mailto:orders@ngp.com)



---

## INSTALLATION INSTRUCTIONS

---

### 318V



1. Measure and cut metal retainer and gasketing insert to fit.
2. Crimp or stake metal retainer at both sides and both ends to prevent gasket from migrating during use.
3. Items with drip cap should be notched to clear stops on jambs before installation.
4. Position seal on door with gasket compressed  $\frac{1}{16}$ " against sill.
5. Mark screw holes.
6. Drill pilot holes with a  $\frac{7}{64}$ " bit.
7. Install with screws provided.
8. Adjust height so that gasket does not impede proper closing and latching of door.

**ngp.com**

**1-800-NGP-RUSH**

FAX: (800) 255-7874  
QUOTES: [quotes@ngp.com](mailto:quotes@ngp.com)  
ORDERS: [orders@ngp.com](mailto:orders@ngp.com)