




335

Mortise Mounted Door Bottom

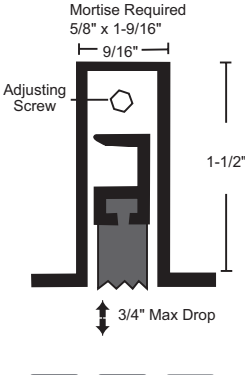

See ngp.com for
All Applicable
Certifications for
this Product.



POSITIVE PRESSURE
TESTED GASKETING
MATERIALS FOR
FIRE DOORS FOR
APPLICATION TO
HOLLOW-METAL-TYPE
FIRE DOORS RATED
UP TO 3 HOURS AND
WOOD-TYPE FIRE
DOORS RATED UP TO
1½ HOURS.
CATEGORY H

SMOKE AND DRAFT
CONTROL GASKETING
(CATEGORY H) TESTED
TO UL 1784; MEETS
REQUIREMENTS OF
NFPA 105, IBC FOR USE
ON "S" LABEL DOORS.

S

M

A

F

ngp.com

1-800-NGP-RUSH

FAX:

(800) 255-7874

QUOTES:

quotes@ngp.com

ORDERS:

orders@ngp.com




INSTALLATION INSTRUCTIONS



WARNING:

Do not pull drop bar out of case unless disengaged from spring or damage will occur, and void warranty.

335

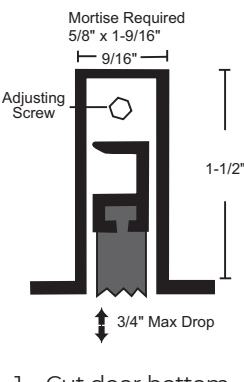

1. Cut door bottom to exact net width of door. Do not extend drop bar while cutting. Do not cut from end with adjusting rod. **MAXIMUM CUT** door bottoms 36" and longer = 4", shorter than 36" should not be field cut - order net length.
2. Mortise bottom of door on center line 5/8" wide x 1 9/16" deep.
3. Position door bottom in mortise with actuator rod toward hinge edge; mark screw holes.
4. Drill pilot holes for screws using 5/64" drill bit.
5. Install door bottom with adjusting rod at the hinged side of door .
6. Set adjusting rod for proper seal. To reduce drop, turn adjusting rod right; to increase drop turn left.

NOTE: Once hinged end of drop bar makes solid contact, other end will drop. Maximum drop = 3/4".

ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

ORDERS: orders@ngp.com