




421N

Automatic Door Bottom

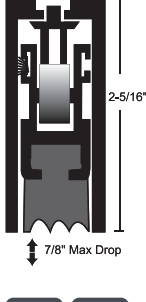

See ngp.com for All Applicable Certifications for this Product.



POSITIVE PRESSURE TESTED GASKETING MATERIALS FOR FIRE DOORS FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS RATED UP TO 1½ HOURS. CATEGORY H

SMOKE AND DRAFT CONTROL GASKETING (CATEGORY H) TESTED TO UL 1784; MEETS REQUIREMENTS OF NFPA 105, IBC FOR USE ON "S" LABEL DOORS.



ngp.com
1-800-NGP-RUSH

FAX:
(800) 255-7874

QUOTES:
quotes@ngp.com



INSTALLATION INSTRUCTIONS




WARNING:

Neoprene products can expose you to chemicals including chloroprene, which is known to the State of California to cause cancer and/or developmental and reproductive harm. For more information, go to P65Warnings.ca.gov.

Do not pull drop bar out of case unless disengaged from spring or damage will occur and void warranty.

421N

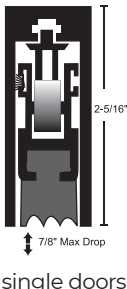

1. For single doors, cut door bottom $\frac{1}{8}$ " shorter than distance between stops on frame. For pairs, cut $\frac{1}{16}$ " shorter than distance between stop on frame and meeting edge of door. Do not cut until drop bar is extended in down position by pressing on plastic roller. Insert nail provided into small hole located in center of the side of the drop bar to keep drop bar extended while cutting. **MAXIMUM CUT** door bottoms 36" and longer = 4", shorter than 36" do not field cut. Order net length.
2. With door closed and drop bar still held extended in down position by nail inserted in Step 1, position on push side of door with roller touching frame stop at hinge side and gasket material slightly compressed against floor/sill, marking screw holes.
3. Drill pilot holes for screws using $1\frac{1}{64}$ " drill bit.
4. Install with screws provided.
5. Remove nail holding drop bar extended before opening door.

ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874
QUOTES: quotes@ngp.com