


## 43CB Cushion Bronze

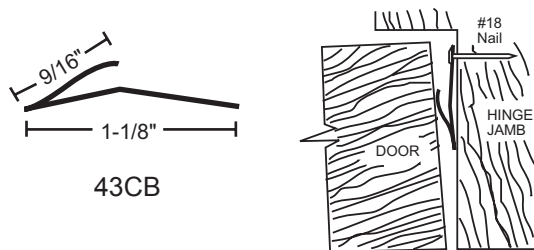

### Installation Instructions

#### Metal Frames

Use #41 drill for #4 wafer head drive nails install on 2" centers.

#### Wood Frames

Use #18 x 7/8" nails install on 2" centers.

1. Cut bronze to fit opening.
2. Install bronze on door frame header using fasteners for frame application shown above. Position flat edge of strip as close to stop as possible.
3. Install bronze on jambs of door frame. Miter top ends to prevent binding at corners.
4. Cut out material at lock strike.
5. Adjust bronze so it does not impede proper closing and latching of the door.

### Instrucciones de instalación

#### Marcos de Metal

Utilice broca #41 para los tornillos de cabeza wafer #4; instálelos cada 2".

#### Marcos de Madera

Use clavos #18 X 7/8"; instálelos cada 2".

1. Corte el sello de bronce a la medida de la abertura .
2. Instale el sello de bronce en el cabezal del marco de la puerta usando sujetadores o tornillos para marco como se muestra arriba. Coloque el borde plano del sello lo más cerca posible del tope.
3. Instale el sello de bronce en las jambas del marco de la puerta. Corte los extremos en ángulo para evitar que se doblen en las esquinas.
4. Recorte el espacio para la placa de la cerradura.
- 5 Ajuste el sello de bronce de modo que no impida cerrar y correr debidamente el pasador de la puerta.