


81369N Overhead Door Bottom Seal

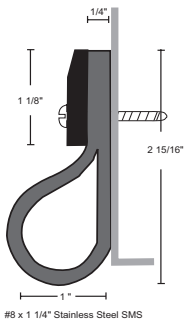

Installation Instructions

1. Peel release liner from adhesive tape, located on the neoprene.
2. Apply neoprene to metal retainer as illustrated above.
3. Cut seal to fit.
4. Drill through neoprene using 3/16" drill bit at screw hole locations.
5. Locate material at bottom of door.
6. Mark screw holes.
7. Drill pilot holes for screws using 7/64" drill bit.
8. Install material with screws provided, working from one end to the other.
9. Adjust position so seal does not impede proper closing and locking of overhead door.

Instrucciones de instalación

1. Remueva el protector antiadherente de la cinta adhesiva que está en el neopreno.
2. Aplique el neopreno al retenedor metálico como se muestra arriba.
3. Corte el burlete a la medida.
4. Con una broca de 3/16" taladre a través del neopreno en los orificios para los tornillos.
5. Coloque el material en la parte inferior de la puerta.
6. Marque los orificios para los tornillos.
7. Taladre los orificios guía para los tornillos usando una broca de 7/64".
8. Instale el material con los tornillos suministrados, procediendo de un extremo al otro.
9. Ajuste la posición para que el sello no impida cerrar y atrancar debidamente la puerta ascendente.