



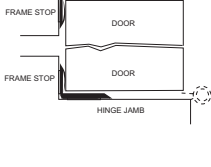

# 9450

Intumescent  
with TPE Fin Fire  
and Smoke Seal

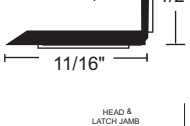

20, 45, 60, 90 Minute  
Rated Category B  
Wood Doors Up To:  
Single Swing  
4'0 X 9'0, Perimeter  
Application  
Pairs  
8'0 X 9'0, Perimeter/  
Meeting Edge

See [ngp.com](http://ngp.com) for  
All Applicable  
Certifications for  
this Product.



POSITIVE PRESSURE  
TESTED GASKETING  
MATERIALS FOR  
FIRE DOORS FOR  
APPLICATION TO  
HOLLOW-METAL-  
TYPE FIRE DOORS  
RATED UP TO 3  
HOURS AND WOOD-  
TYPE FIRE DOORS  
RATED UP TO  
1½ HOURS.  
CATEGORY G, H

SMOKE AND  
DRAFT CONTROL  
GASKETING  
(CATEGORY H)  
TESTED TO UL  
1784; MEETS  
REQUIREMENTS  
OF NFPA 105, IBC  
FOR USE ON "S"  
LABEL DOORS.



[ngp.com](http://ngp.com)  
1-800-NGP-RUSH

FAX:  
(800) 255-7874


QUOTES:  
[quotes@ngp.com](mailto:quotes@ngp.com)

ORDERS:  
[orders@ngp.com](mailto:orders@ngp.com)



## INSTALLATION INSTRUCTIONS

# 9450



$\frac{1}{8}$ " clearance required between doors or between door and frame.

UL Tested and Classified for Fire and Smoke Doors.

\* Seals against smoke, fire, air and weather.

\* Excellent compression; door latches easily.

1. The surface temperature of the frame must be above 50°F for adhesive to bond.
2. Clean frame with clean wipe provided remove dust, oil, grease and dirt. Wax coated or high gloss painted surfaces may require roughening with a scotch brite pad or sandpaper so adhesive will bond properly.
3. Measure and pre-cut pieces to fit where seal is to be mounted.
4. Remove protective backing 1 to 2 feet at a time.
5. Position on frame opposite edge of door or at meeting edge as illustrated above.
6. Adhere by pressing firmly (approx 15 lbs. pressure required) straight down along entire length of gasketing. Do not remove and relocate.
7. Make sure the seal does not impede proper closing and latching of the door.

**ngp.com**

**1-800-NGP-RUSH**

FAX: (800) 255-7874

QUOTES: [quotes@ngp.com](mailto:quotes@ngp.com)

ORDERS: [orders@ngp.com](mailto:orders@ngp.com)