


NCP 97V

Aluminum
Door Sweep or
Surface Mounted
Astragal Sets

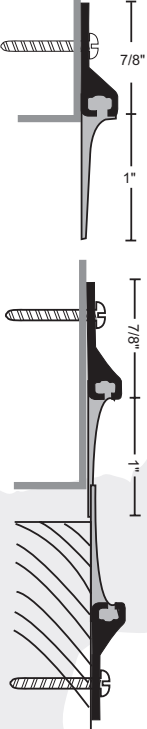

NOT smoke when sets for astragal

SEAL



See ngp.com for All Applicable Certifications for this Product.



SAFETY US-CA
R10042

POSITIVE PRESSURE TESTED GASKETING MATERIALS FOR FIRE DOORS FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS RATED UP TO 1½ HOURS. CATEGORY H

SMOKE AND DRAFT CONTROL GASKETING (CATEGORY H) TESTED TO UL 1784; MEETS REQUIREMENTS OF NFPA 105, IBC FOR USE ON "S" LABEL DOORS.

- ▶ Aluminum Alloy 6063, T5 Temper
- ▶ Flame/Moisture Resistant
- ▶ #6 x ¾" Stainless Steel Sheet Metal Screws Furnished

ngp.com
1-800-NCP-RUSH

INSTALLATION INSTRUCTIONS



WARNING:

These products can expose you to chemicals including DINP Diisononyl phthalate, which is known to the State of California to cause cancer and/or developmental and reproductive harm. For more information, go to P65Warnings.ca.gov.

97V

Sweep Installation

1. Cut sweep to fit.
2. Close door. Hold sweep at bottom of door. Tap down until contact is made between the sweep and threshold.
3. Mark screw holes.
4. Drill pilot holes for screws using a $\frac{7}{64}$ " drill bit.
5. Install with screws provided.
6. Adjust position so sweep does not impede proper closing and latching of door.

Astragal Installation

1. Cut astragal to fit.
2. Position astragal and mark screw holes.
3. Drill pilot holes for screws using a $\frac{7}{64}$ " drill bit.
4. Mount one piece of astragal on each leaf. The gasket material is tapered to allow smooth operation of either door. The overlap should be approximately $\frac{1}{4}$ ".
5. Adjust position so astragal does not impede proper closing and latching of doors.



ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

MEMPHIS

4985 East Raines Road
Memphis, TN 38118

CARSON CITY

3689 Arrowhead Drive
Carson City, NV 89706