




99

Extended Door Shoe

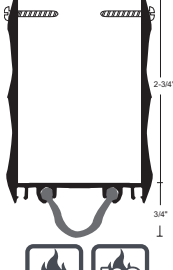

See ngp.com for All Applicable Certifications for this Product.



POSITIVE PRESSURE TESTED GASKETING MATERIALS FOR FIRE DOORS FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS RATED UP TO 1½ HOURS. CATEGORY H

SMOKE AND DRAFT CONTROL GASKETING (CATEGORY H) TESTED TO UL 1784; MEETS REQUIREMENTS OF NFPA 105, IBC FOR USE ON "S" LABEL DOORS.



ngp.com
1-800-NGP-RUSH

FAX:
 (800) 255-7874


QUOTES:
quotes@ngp.com

ORDERS:
orders@ngp.com



INSTALLATION INSTRUCTIONS

99

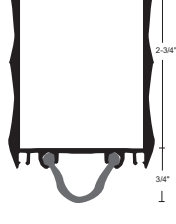

1. Measure and cut door shoe to fit.
2. Items with drip cap should be notched to clear stops on jambs before installation.
3. Position seal on door with gasket compressed $\frac{1}{16}$ " against sill.
4. Mark screw holes.
5. Drill pilot holes with a $\frac{7}{64}$ " bit.
6. Install with screws provided.
7. Adjust position so that gasket does not impede proper closing and latching of door.

ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

ORDERS: orders@ngp.com