




D648

Nylon Brush Seals

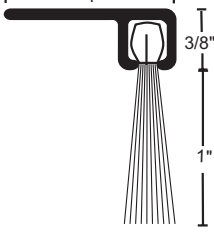

See ngp.com for
All Applicable
Certifications for
this Product.



POSITIVE PRESSURE
TESTED GASKETING
MATERIALS FOR
FIRE DOORS FOR
APPLICATION TO
HOLLOW-METAL-
TYPE FIRE DOORS
RATED UP TO 3
HOURS AND WOOD-
TYPE FIRE DOORS
RATED UP TO
1½ HOURS.
CATEGORY J.



ngp.com
1-800-NGP-RUSH

FAX:
(800) 255-7874


QUOTES:
quotes@ngp.com

ORDERS:
orders@ngp.com



INSTALLATION INSTRUCTIONS

D648

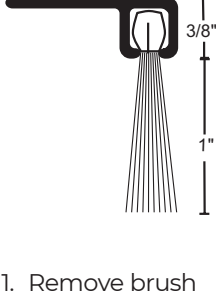

1. Remove brush from metal retainer.
2. Cut brush to fit opening, using the cutting section of pliers or diagonal cutters. If bristles are not secure, use a drop of adhesive to secure the brush.
3. Cut the metal retainer to length.
4. Replace brush in metal retainer.
5. With door closed, position seal and mark screw holes.
6. Drill pilot holes for screws with a $\frac{7}{64}$ " bit.
7. Install with screws provided.
8. Slightly peen the bottom end of each retainer to secure the brush from moving.
9. Adjust position so brush is touching against door, but does not impede proper closing and latching of door.

ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

ORDERS: orders@ngp.com