




# I-616

Nylon Brush  
Seals

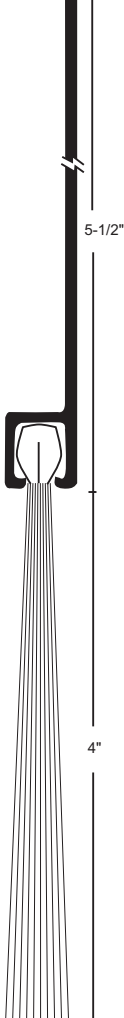

- ▶ Aluminum Alloy 6063, T5 Temper
- ▶ Synthetic Polymer: Polyamide
- ▶ #6 X 3/4" Stainless Steel Sheet Metal Screws Furnished
- ▶ Screw Holes Slotted for Adjustment



**ngp.com**  
**1-800-NGP-RUSH**

FAX:  
(800) 255-7874


QUOTES:  
quotes@ngp.com

ORDERS:  
orders@ngp.com



## INSTALLATION INSTRUCTIONS

### I-616



1. Remove brush from metal retainer.
2. Cut brush to fit opening, using the cutting section of pliers or diagonal cutters. If bristles are not secure, use a drop of adhesive to secure the brush.
3. Cut the metal retainer to length.
4. Replace brush in metal retainer.
5. With door closed, position seal and mark screw holes.
6. Drill pilot holes for screws with a  $\frac{7}{64}$ " bit.
7. Install with screws provided.
8. Slightly peen the bottom end of each retainer to secure the brush from moving.
9. Adjust position so brush is touching against door, but does not impede proper closing and latching of door.

**ngp.com**  
**1-800-NGP-RUSH**

FAX: (800) 255-7874  
QUOTES: [quotes@ngp.com](mailto:quotes@ngp.com)  
ORDERS: [orders@ngp.com](mailto:orders@ngp.com)