


L-700-RX, L-700-RX-316SS, L-1800, L-1800-316SS, L-VRSG-2, L-VRSG-3, AFDL

Louvers: Fit 1-3/4" Thick Doors

Installation Instructions

1. Cut out door in accordance with door manufacturers procedure.
2. If door cut-outs have radius corners it may be necessary to square them out prior to installing the louver.
3. Position outer frame with louver core, in door cut out.
4. Position inner frame and insert and start all screws before fully tightening.
5. Tighten screws using crisscross pattern. Use caution when using power screw driving equipment to avoid stripping the material.

FIELD PAINTING: FOR BEST RESULTS SCUFF FINISH WITH A SCOTCH-BRITE PAD OR SAND PAPER BEFORE PAINTING.

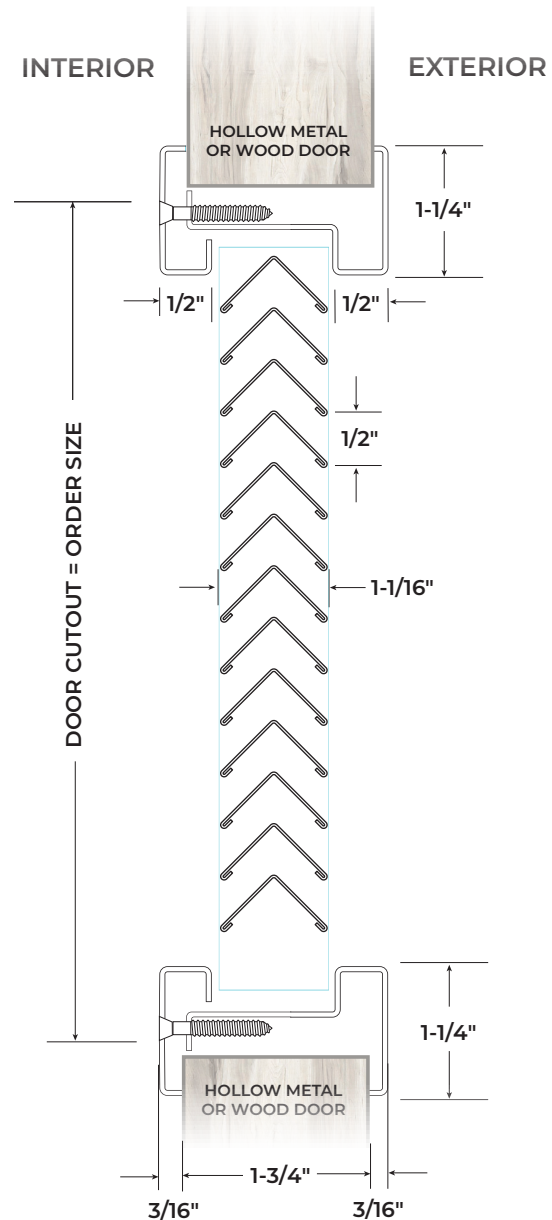

L-700-RX, L-700-RX-SS, L-700-RX-316SS, L-1800, AFDL
undersized 1/8" for clearance
L-VRSG-2 & L-VRSG-3 undersized 1/16" for clearance.