


## L-FRA 100-ALUM Aluminum Lite Kit for 1-3/4" door 3/16", 1/4" , or 5/16" Glass

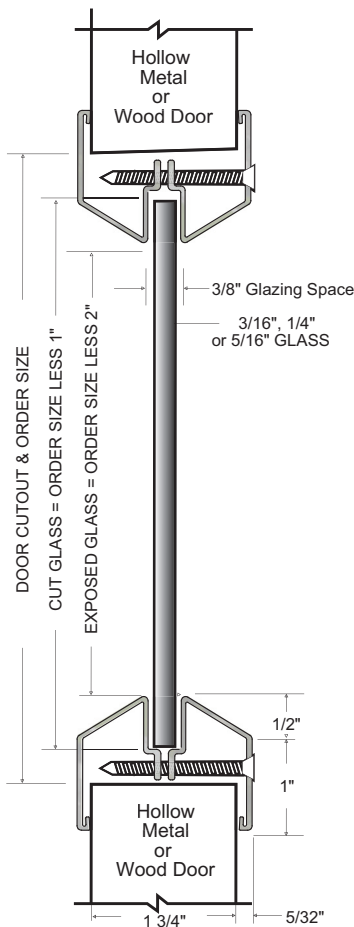

### Installation Instructions

1. Cut out door in accordance with door manufacturers listing procedure. Steel fire-rated doors do NOT require an opening reinforcing channel or reinforcing clips.
2. Install glass & glazing material (sold separately), into lite kit.
3. Position outer frame in door cut out.
4. Position inner frame and insert and start all screws before fully tightening.
5. Tighten screws using a criss cross pattern. Caution: over tightening will deform material.

**FIELD PAINTING: for best results scuff finish with a Scotch-brite pad prior to painting**

NOT FIRE-RATED

### Instrucciones de instalación

1. Recorte la abertura en la puerta de acuerdo a las homologaciones (listing) del procedimiento del fabricante. Las puertas de acero certificadas cortafuego NO requieren un canal de refuerzo de apertura o grapas de refuerzo.
2. Instale el vidrio y la cinta espuma adhesiva (se vende por separado) dentro del marco de acristalamiento.
3. Coloque el marco exterior en la abertura de la puerta.
4. Coloque el marco interior e inserte y comience a enroscar todos los tornillos antes de fijarlos completamente.
5. Apriete los tornillos usando un patrón entrecruzado. Precaución: si aprieta demasiado los tornillos el material se deformará.

**APLICACIÓN DE PINTURA EN EL AREA DE INSTALACIÓN: para obtener mejores resultados antes de pintar lije con una almohadilla Scotch-Brite.**

NO ESTÁ CERTIFICADA CORTAFUEGO