



PLSL

STORM-PRO Inverted Split Y Security Door Louver



For 1 3/8" to 1 3/4" Door



Louver for Use in Windstorm-Rated Assembly in Accordance with ANSI/ASTM E330, ANSI/ASTM

E1886, ASTM E1996, AAMA/WDMA/CSA 101/I.S.2/A440, FEMA 320, FEMA 361 and ICC 500. Design Pressure = +/- 70 PSF Large Missile Impact = 350 ft. lbs. Hazard - Hurricane

This Product is **NOT** Rated for Use on Fire-Rated Doors

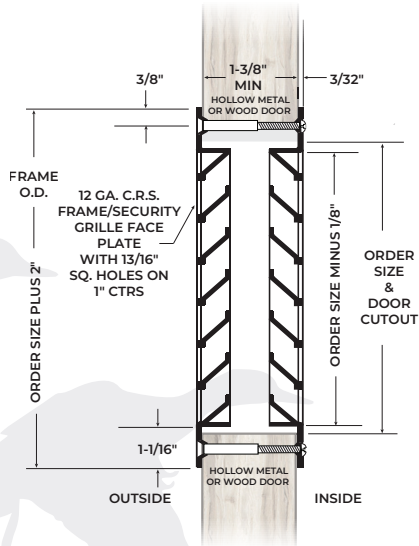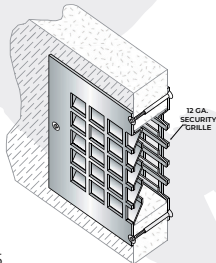

Not To Scale

INSTALL PLSL LOUVER

1. Cut out door in accordance with door manufacturers procedure.
2. If door cut-outs have radius corners it may be necessary to square them out prior to installing the louver.
3. Position outer frame with louver core, in door cut out, insert and start all screws before fully tightening.
4. Tighten screws using a crisscross pattern. Use caution when using power screw driving equipment to avoid stripping the material.
5. Position inner frame and secure to door using the same procedure.

FIELD PAINTING: for best results scuff finish with a Scotch-Brite® pad prior to painting.