



For the complete list of Aluminum Sliding Door Hardware, the most up-to-date product information and installation instructions, scan the QR code or visit ngp.com.




SLAL EXT KIT

SLAL EXT KIT 48"DR

Pocket Door Kit-7'-9" Extension

INSTALLATION INSTRUCTION

1. Cut Wood Extensions to desired length
2. Cut Aluminum Extensions to desired length.
3. Ensure overlapping both wood and aluminum channel by 2.0". (pic-4)
4. Insert wood extension inside aluminum channel using a soft mallet until the wood is fully seated. (pic-2)

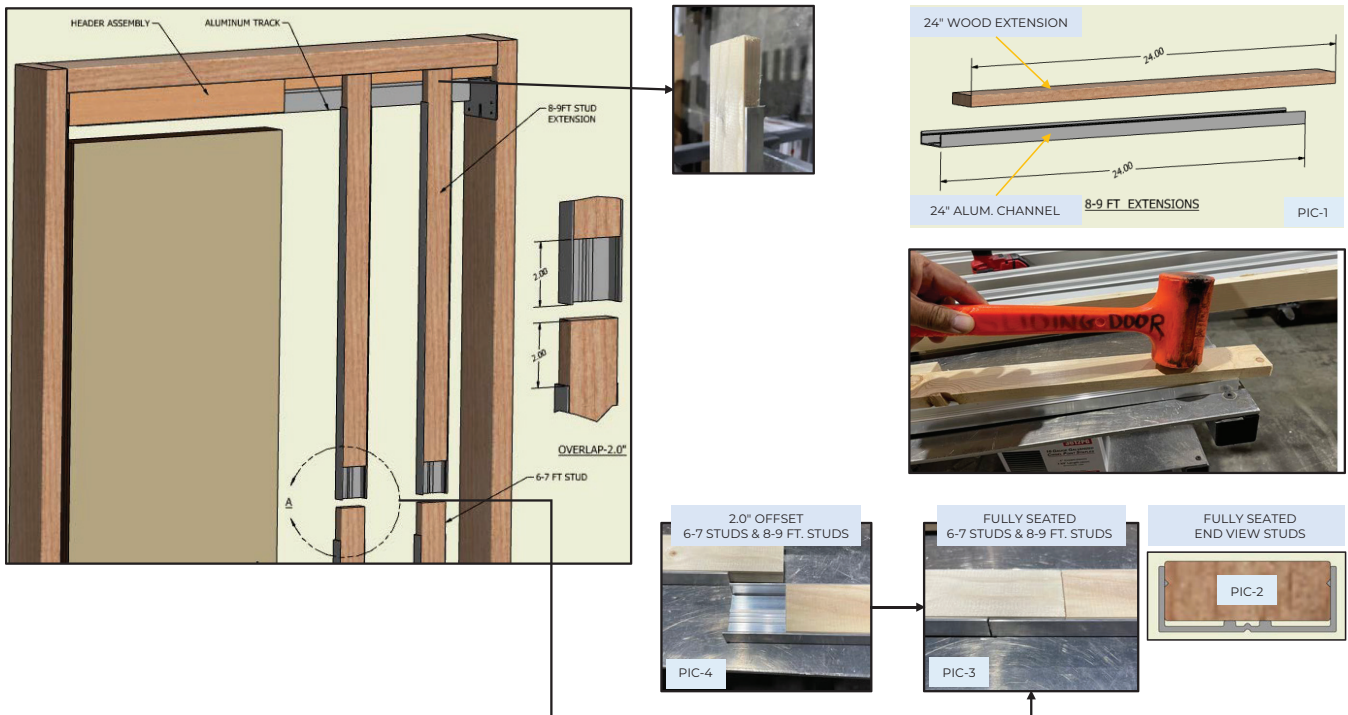

NGP-SLI-SLAL EXT KIT-PRI-I221-A



NGP MEMPHIS
4985 East Raines Road
Memphis, TN 38118
orders@ngp.com

NGP VEGAS
4584 Calimesa Street
Las Vegas, NV 89115
vegasorders@ngp.com

ngp.com
1-800-NGP-RUSH