




SSD, SSD-316SS

Security Sliding Door for Vision Lite Kit

Installation Instructions

1. Position over Lite Kit as illustrated.
2. Insert and start all screws before fully tightening.
3. Tighten screws using a criss cross pattern.
Use caution when using power screw driving equipment to avoid stripping the material.

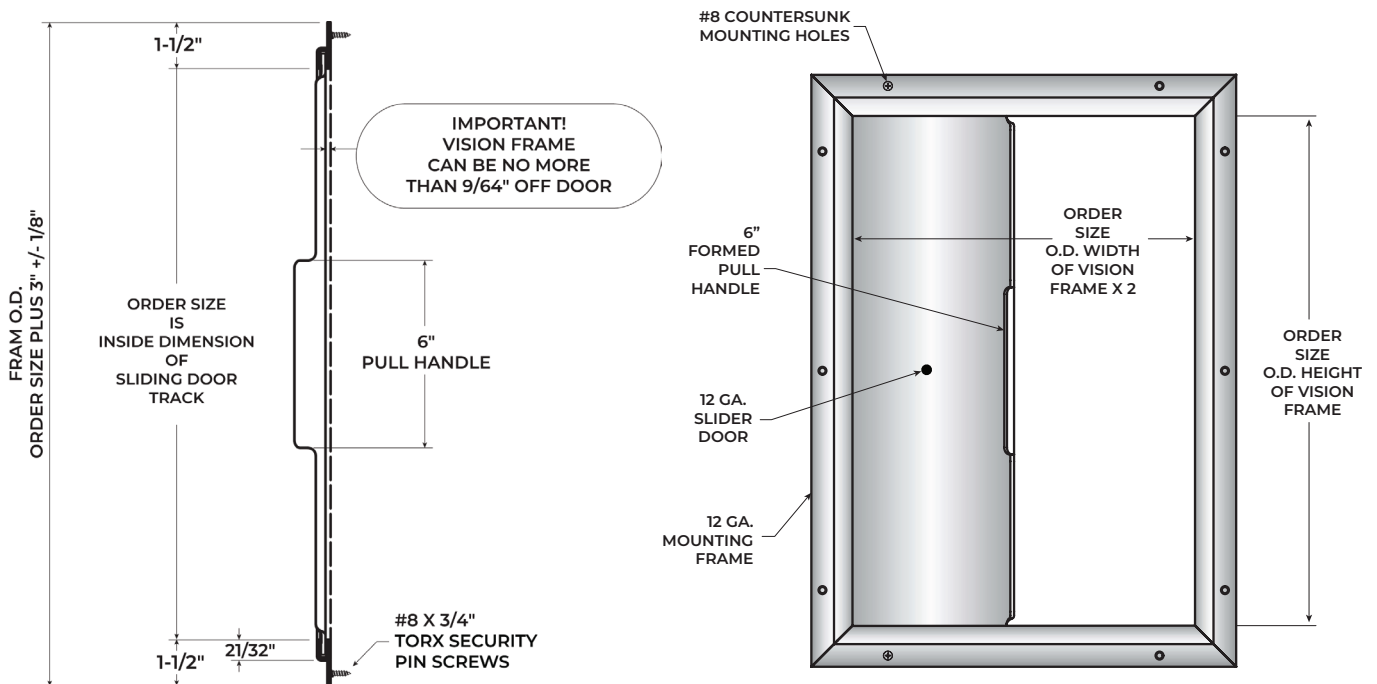

Fire Door Glass
Light Frame