


National Guard Products Inc.

1-800-647-7874
www.ngp.com



Door Bottom Shoes

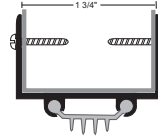

Installation Instructions

1. Measure and cut door shoe to fit.
2. Items with drip cap should be notched to clear stops on jambs before installation.
3. Position seal on door with gasket compressed 1/16" against sill.
4. Mark screw holes.
5. Drill pilot holes with a 7/64" bit.
6. Install with screws provided.
7. Adjust position so that gasket does not impede proper closing and latching of door.



UL 10C Positive Pressure Tested Gasketing Material for Fire Doors.



UL10B Gasketing Materials for Fire Doors.



Intended for Application to Classified Steel fire doors rated up to 3 hours and Wood type fire doors up to 1 1/2 hours.

Smoke and Draft Control door bottom (Category H) tested to UL 1784; meets requirements of NFPA 105, IBC. Intended for application to classified "S" label doors. 5/11